

## Battery Charging Procedure

### Rapid Rate and 6 Way



- Always check that you have the correct Cup in the Cassette that is intended for your radio make and model and that the cup is locked into place with the fastening screw in order to ensure good electrical contact.
- Check that the AC Adaptor is connected to the Cassette and is plugged into the wall AC outlet
- Slide the Battery Pack or Portable Radio into Battery Charger

#### LED Indicator

- **ORANGE:**  
The LED will be Orange during Battery diagnosis for a few seconds and then changes colour when charging unit is ready for use.
- **PLEASE NOTE:**  
If LED remains Orange the Cup is fitted incorrectly to the Cassette. **Remove the Cup and turn 180° and re-screw to Cassette using the fastening screw.**
- **RED:**  
The LED will be Red during charging.
- **FLASHING GREEN:**  
The LED will be flashing Green when the Battery has reached a capacity of 80% of its fully charged state.
- **GREEN:**  
The LED will go Green when the Battery Pack is fully charged.
- **FLASHING RED:**  
In case of a faulty Battery pack the LED will flash Red.