



ANT-M-701 UHF

INSTALLING YOUR ANTENNA

IMPORTANT


- Before mounting the Antenna, move your vehicle to a shaded location where the temperature is 21° to 37° C
- Do not remove the paper backing from the Coupler Box or Antenna Base until **Step 4**. Once you stick the Coupler Box or Antenna Base to the glass, you cannot remove it without damaging it.



STEP 1

Select a location for the Antenna (such as the top centre of the front or rear windows) that:-

- does not block the Driver's view
- does not interfere with windshield wiper operation
- is not coated with a metal film type sunscreen
- is not within 40mm of a defroster element or metal trim

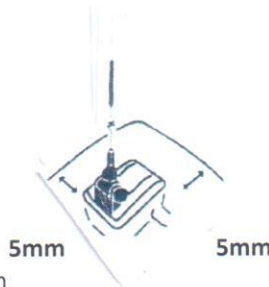

STEP 2

Position the Antenna and Coupler Box at the desired location to confirm that neither will interfere with your vehicle's normal operation.

STEP 3

Use the supplied alcohol pad to clean the inner and outer surface of the glass at the mounting location. Allow the glass to dry completely before continuing.

STEP 4

Remove the paper backing from the Coupler Box and carefully position it over the mounting location inside the vehicle. Then firmly press it into place for 5 seconds.

STEP 5

Remove the paper backing from the Antenna Base and carefully position it at the mounting location opposite the Coupler Box (directly on top of the Coupler Box on the outside of the glass). Then firmly press it into place and hold it for 5 seconds.

STEP 6

Screw the supplied Cable's Connector onto the Coupler box.

STEP 7

Route the Cable to your Transceiver and connect it according to the Transceiver's instructions.

STEP 8

Loosen the Antenna base's bolt and position the Antenna so it is vertical then tighten the bolt.

ANTENNA:

Preset for 450 – 470 MHz only

PACKAGE INCLUDES:

- ❖ Antenna
- ❖ Coupling Box
- ❖ Cable
- ❖ Alcohol Pad
- ❖ User's Guide